



Fitting and adjustment instructions

Dynamic 2D-C

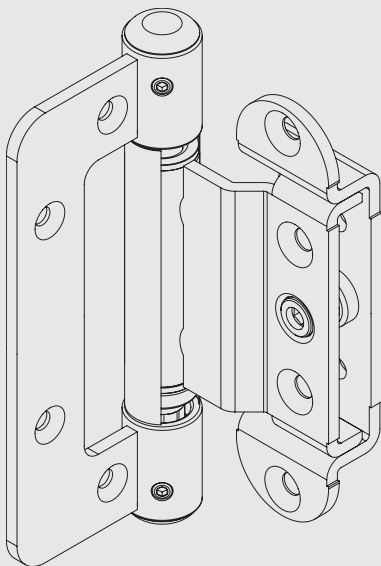

Fitting instructions

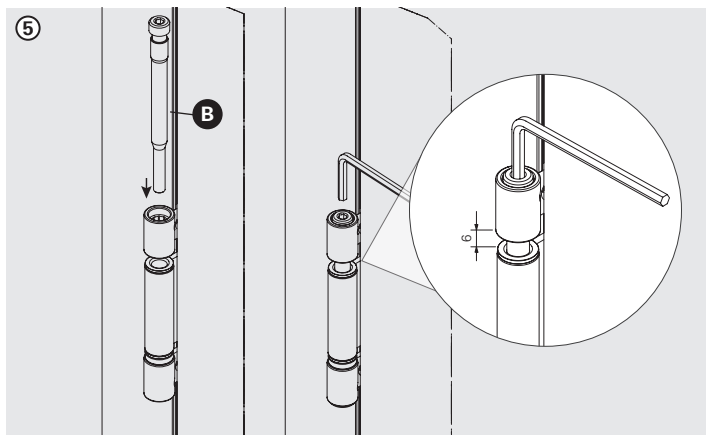


Insert the sash into the frame and screw in the pin marked **B** with a 4 mm Allen Key till the measure 6mm is reached.


Open the sash and screw in the security screws marked **C** and **D**.

Pin removing:


Unscrew screws **C** and **D** and unscrew pin **B**.

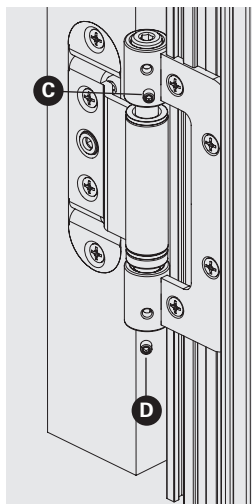

⑥

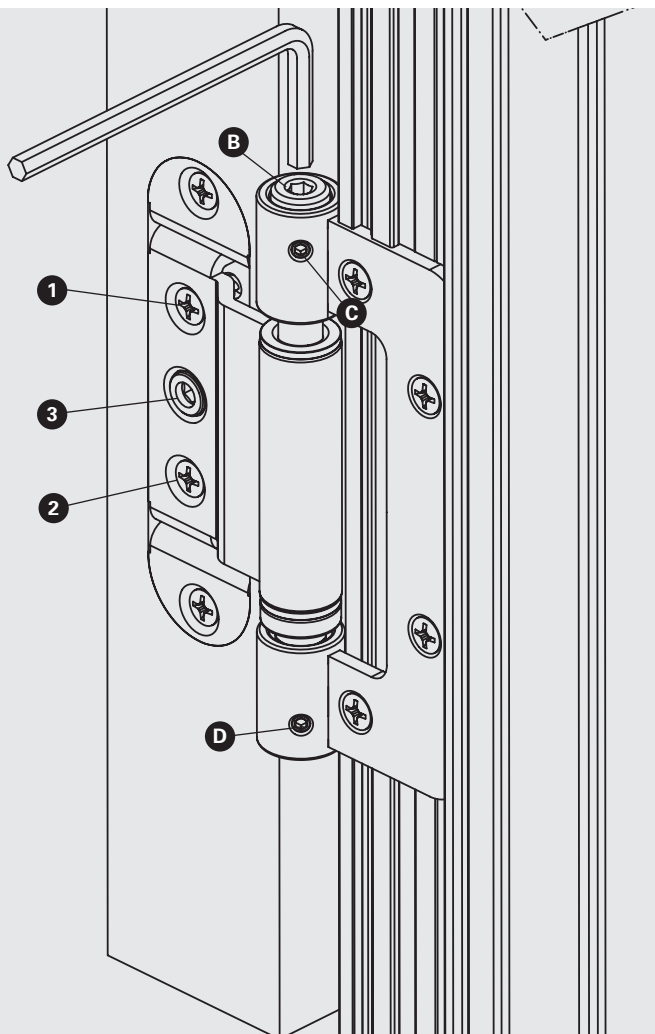

Adjustment instructions

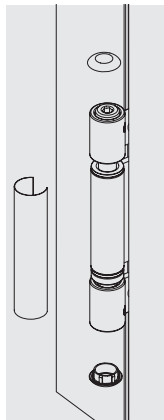

Horizontal adjustment:

unscrew by three turns, screws ❶ and ❷.

Tighten or loosen alternately screw ❸ with a 4 mm Allen Key.

Tighten screws ❶ and ❷.

Adjustment $\pm 2\text{mm}$.

Height:

Loosen the screws marked ❸ and ❹.

Turn the pin with a 4mm Allen Key as shown in figure 6.

Adjustment: $-2/+6\text{mm}$.

Insert caps and cover as shown in figure.

SFS Group Fastening Technology LTD
153 Kirkstall Road
Leeds LS4 2AT

enquiries@sfs.com
uk.sfs.com